


CENTRAL CONTROL INSTRUCTION

Wiring Map

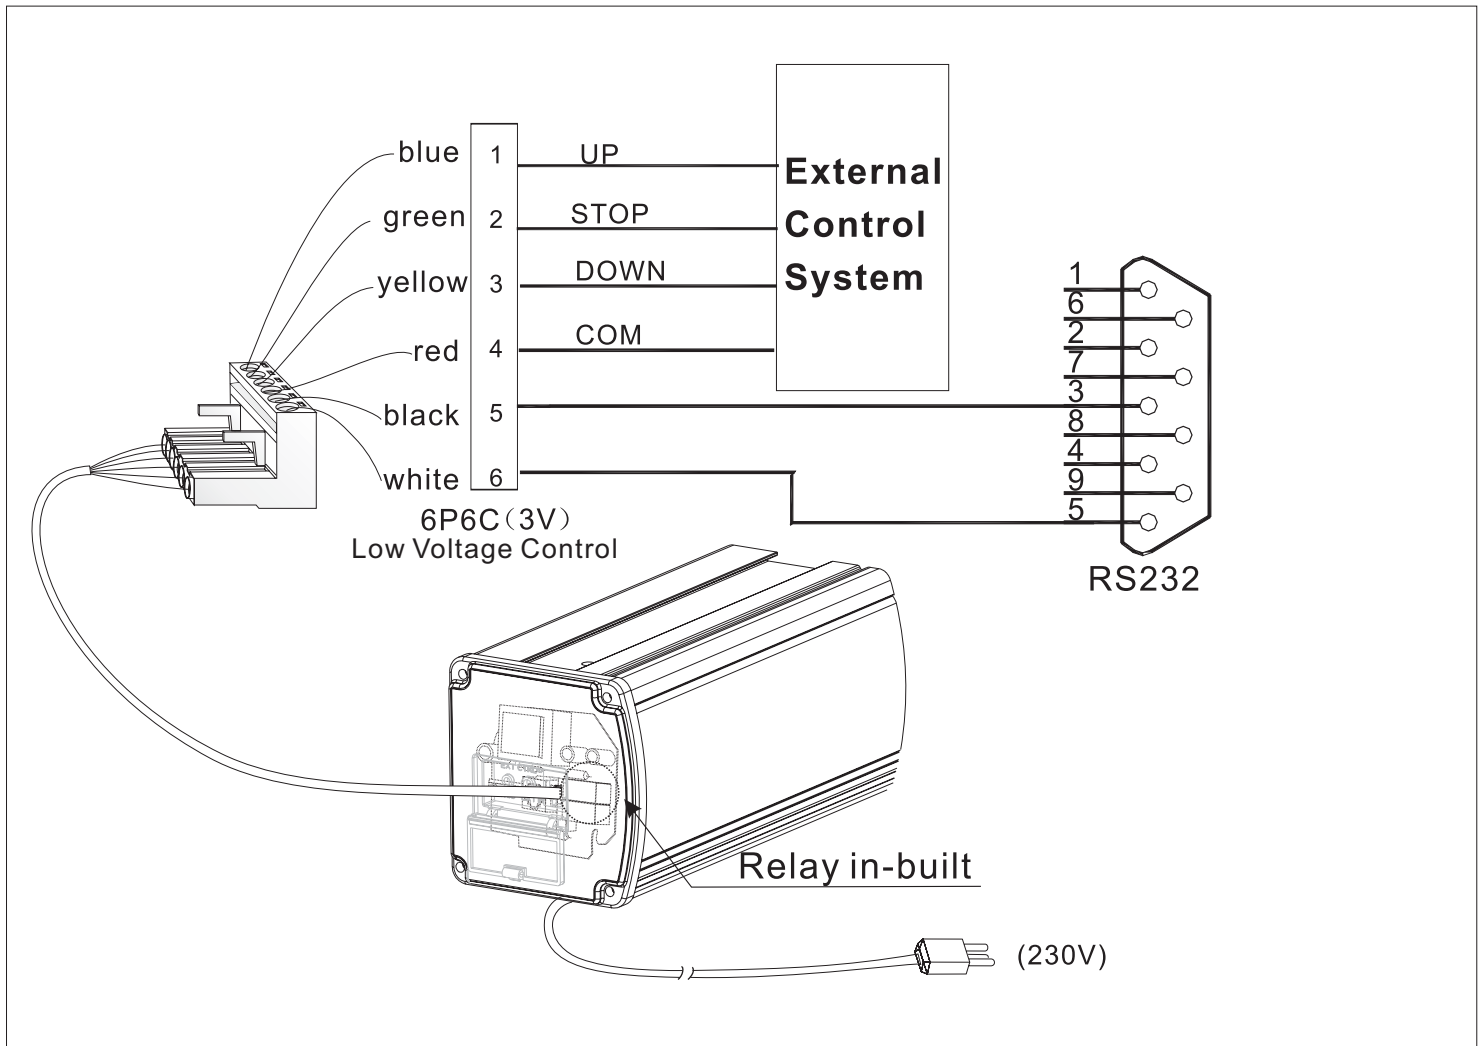

Note: Please do not connect the RS232 line all the time to prevent from damage to the relay

Central Control Protocol & Control Code

DATA BITS : **8 Digits**
INITIAL DIGITS: **Digit 1**
STOP DIGITS : **Digit 1**
BAUD RATE : **2400**

UP : **0xFF 0xEE 0xEE 0xEE 0Xdd**
STOP : **0xFF 0xEE 0xEE 0xEE 0Xcc**
DOWN : **0xFF 0xEE 0xEE 0xEE 0Xee**
MICRO-UP : **0xFF 0xEE 0xEE 0xEE 0xC9**
MICRO-DOWN : **0xFF 0xEE 0xEE 0xEE 0xE9**